



Required tools:

1 Snap Ring Pliers

1 Pick


- Disassemble the OEM brake lever removing the snap ring from the bolt using the snap ring pliers.



- Remove the brake lever pin and remove the lever.



- Walk the retaining ring from the parking brake pin, taking care to not damage any of the ears as the retaining ring will be reused. Remove the parking brake.

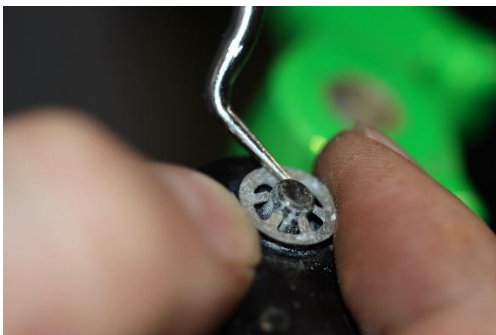

- When assembling parking brake, place the spring in the retaining hole and it will sit on the beak of the OuterImpact lever.



- Finish installing the OuterImpact brake lever on the assembly, reusing the retainer ring. Insert brake lever pin, being sure to slide the snap ring to sit in the groove on the pin.

