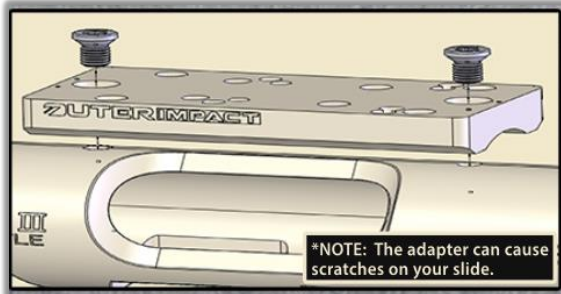


## Ruger 22/45 M.R.D.A. (Micro Red Dot Adapter) Mounting Instructions


- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

**WARNING:** Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

**Step 1:** Locate bag marked “MNT HDWR” and remove the 2 Torx screws.





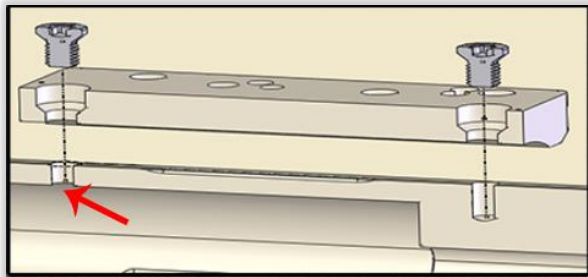


**Step 2:** Align M.R.A. with holes in the receiver. Fasten M.R.A. with Torx screws. Torque to **25 in/lbs.**



**Step 3:** Inspect the inside of the receiver to confirm the end of the torx screw does not interfere with the bolt.

**Step 4:** Use the screws on the adjacent table to mount your red dot, torquing them to **12 in/lb.**
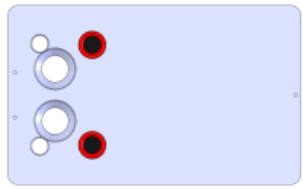
| Sight Manufacturer | Sight Models   | Screws Used   |
|--------------------|--|---|
| Swampfox           | Sentinel   | M3 x 8   |
| Springfield        | Wasp   |   |
| J-Point            | Micro  | M3 x 6   |
| Crimson Trace      | 1500/1550  | OEM Screws  |
| Shield             | RMSc/SMSc  | M3 x 8   |
| Riton              | 3 Tactix MPRD 2.0<br>X3 Tactix V2  |   |
| Holosun            | 407/507K   | M3 x 10  |
| Romeo              | Zero   |   |
|                    |  |   |

Utilize liquid thread locker upon final installation of all threaded fasteners