

OUTERIMPACT

Canik TP9 Elite Combat M.R.A. (Modular Red Dot Adapter)


Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

Step 1: Remove existing rear plate from the firearm.

Step 2: Be sure to keep the factory screws and washers after removing the installed plate. We will be using them to install the OuterImpact adapter.

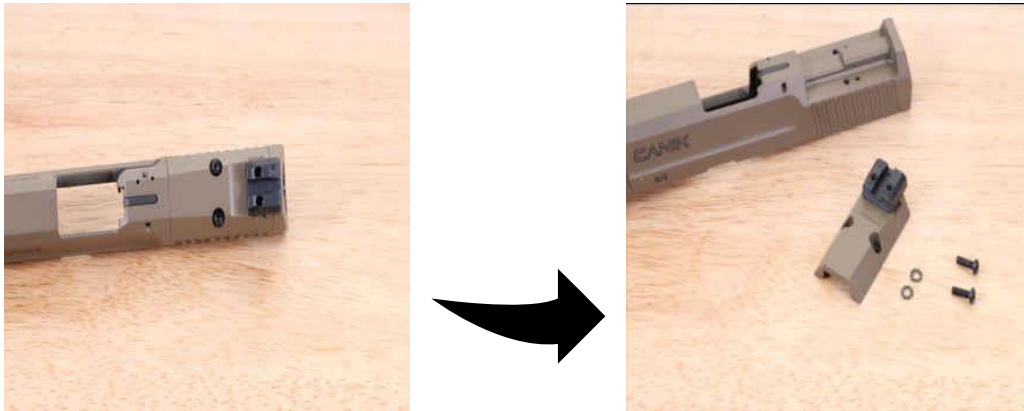

Step 3: Test fit the Red Dot sight to the OuterImpact adapter, utilizing the red dot pattern installation chart. Note: Make sure the screws do not stick out beyond the bottom of the adapter. After test fitting, remove Red Dot sight from the adapter.

Step 4: Secure the sight adapter directly to the slide using the manufacturer's washers and screws. Torque to **25 in/lb**. We recommend applying blue thread locker to all threads upon final installation.

