

OUTERIMPACT

Sig P320-M17 M.R.D.A. (Micro Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

Step 1: Disassemble slide to remove rear sight plate per manufacturer's instructions taking care not to lose the Loaded Chamber Indicator or the Loaded Chamber Indicator spring.

Step 2: Place Outerimpact plate onto slide with notch for the Loaded Chamber Indicator to the front under the cut-out.



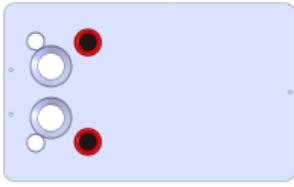
Step 3: Test fit the Red Dot sight to Outerimpact adapter, utilizing adjacent chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

Step 4: Secure adapter plate to slide using the 4-48 screws from the bag marked MNT HDWR and torque to **15 in/lb** with a torque wrench.



Note: The adapter can cause scratches on your slide.

WARNING: Failure to follow all installation guidelines including recommended torque specifications can lead to property damage and/or bodily harm

Sight Manufacturer	Sight Models	Screws Used
Swampfox	Sentinel	M3 x 8 
Springfield	Wasp	
J-Point	Micro	M3 x 6 
Crimson Trace	1500/1550	OEM Screws
Shield	RMSc/SMSc	M3 x 8 
Riton	3 Tactix MPRD 2.0 X3 Tactix V2	
Holosun	407/507K	M3 x 10 
Romeo	Zero	
		

Utilize liquid thread locker upon final installation of all threaded fasteners