

# OUTERIMPACT


## Sig P365 M.R.D.A. (Micro Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

**WARNING:** Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.


**Step 1:** Remove existing rear sight from slide

**Step 2:** Install OUTERIMPACT dovetail onto slide.

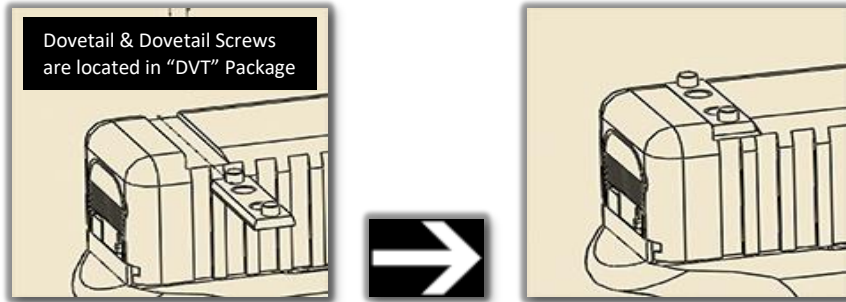

**Step 3:** Test fit the Red Dot sight to Outerimpact adapter, utilizing adjacent chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.



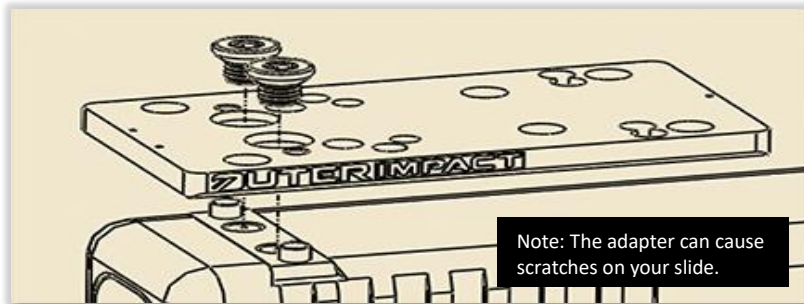


**Step 4:** Secure sight adapter to dovetail with supplied weaver screws. Torque to **25 in/lb.**



**WARNING:** Failure to follow all installation guidelines including recommended torque specifications can lead to property damage and/or bodily harm

The **RED** circles indicate locations for 2 included alignment pins

The **BLACK** circles indicate locations for mounting screws – Torque to 12in/lb

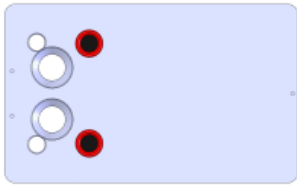Sight Manufacturer	Sight Models	Screws Used
Swampfox	Sentinel	M3 x 8 
Springfield	Wasp	
J-Point	Micro	M3 x 6 
Crimson Trace	1500/1550	OEM Screws
Shield	RMSc/SMSc	M3 x 8 
Riton	3 Tactix MPRD 2.0 X3 Tactix V2	
Holosun	407/507K	M3 x 10 
Romeo	Zero	
		

Note: The adapter has an intentional curve. This curve will flatten out when mounted.

Utilize liquid thread locker upon final installation of all threaded fasteners