

OUTERIMPACT


S&W M&P 380 EZ M.R.A. (Modular Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.


Step 1: Remove existing rear sight from slide

Step 2: Install OUTERIMPACT dovetail onto slide.

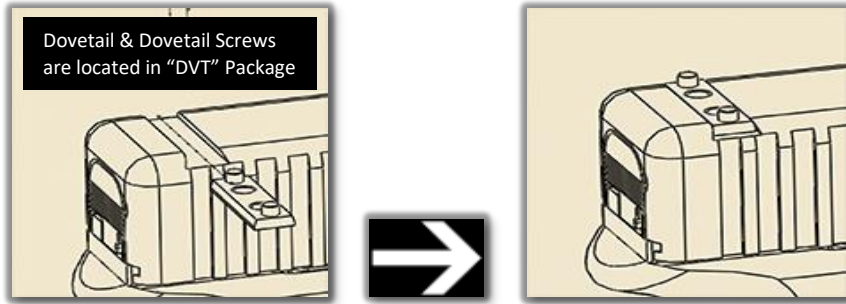

Step 3: Test fit the Red Dot sight to Outerimpact adapter, utilizing adjacent chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

Step 4: Secure sight adapter to dovetail with supplied weaver screws. **Torque to 25 in/lb.**

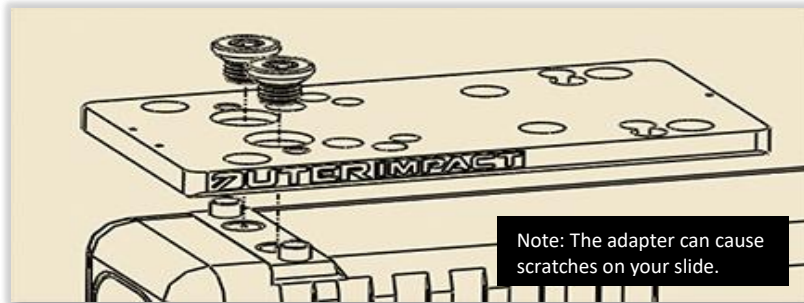

WARNING: Failure to follow all installation guidelines including recommended torque specifications can lead to property damage and/or bodily harm

Step 5: Using the screws/pins and the mounting pattern identified, mount the Red Dot sight adapter and **torque to 12 in/lbs**

Mounting Patterns	Sight Manufacturer	Sight Models	Screws Used
	Vortex Burris UTG TrueGlo	Viper Fast Fire 3 Reflex Micro Dot	M3 x 8
	Burris Doctor Insight Eotech	Fast Fire 2 MRDS MRDS	M3 x 6
	Vortex	Venom	M3 x 6
	Trijicon Holosun	RMR 507c	#6 Additional Screw Purchase Required
	Leupold Shield	Delta Point Delta Point Pro RMS	Sight Supplied Screws work Additional Screw Purchase Required
	Vortex Sig Sauer CMORE	Razor Romeo 3, MAX, XL RTS & STS	M4

- The **RED** circles indicate locations for 2 included alignment pins
- The **BLACK** circles indicate locations for mounting screws -- Torque to 12 in/lb.

Utilize liquid thread locker upon final installation of all threaded fasteners