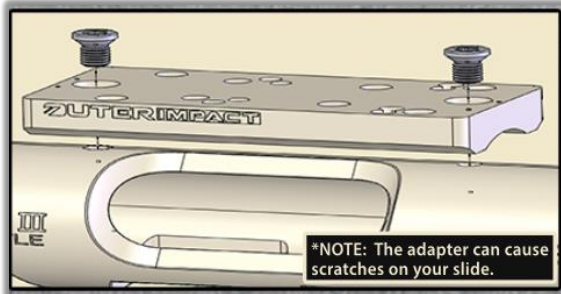


Ruger 22/45 M.R.D.A. (Micro Red Dot Adapter) Mounting Instructions


- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

Step 1: Locate bag marked “MNT HDWR” and remove the 2 Torx screws.





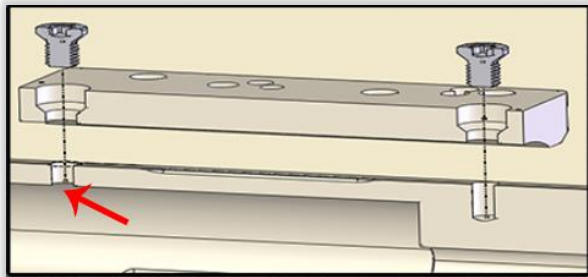


Step 2: Align M.R.A. with holes in the receiver. Fasten M.R.A. with Torx screws. Torque to **25 in/lbs.**



Step 3: Inspect the inside of the receiver to confirm the end of the torx screw does not interfere with the bolt.

Step 4: Use the screws on the adjacent table to mount your red dot, torquing them to **12 in/lb.**

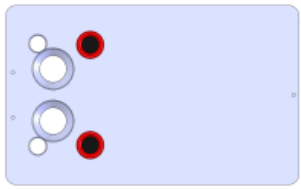Sight Manufacturer	Sight Models	Screws Used
Swampfox	Sentinel	M3 x 8 
Springfield	Wasp	
J-Point	Micro	M3 x 6 
Crimson Trace	1500/1550	OEM Screws
Shield	RMSc/SMSc	M3 x 8 
Riton	3 Tactix MPRD 2.0 X3 Tactix V2	
Holosun	407/507K	M3 x 10 
Romeo	Zero	
		

Utilize liquid thread locker upon final installation of all threaded fasteners