

OUTERIMPACT

BROWNING BUCKMARK - M.R.A (Modular RedDot Adapter) Mounting Instructions

Utilize a certified Gun Smith to install adapter. It is possible to install adapter if a Gun Smith is not accessible, but it is recommended that adapter be installed by a Gun Smith.

WARNING: *Never remove or install components on a gun before ensuring the gun is not loaded and the chamber is clear.*

Step 1: Locate bag marked "MNT HDWR" and remove the two 8-36 screws.




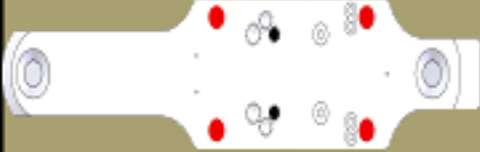



Step 2: Remove top plate sight from Buckmark. Leave all other exposed components in place.

STEP 3: Align hole on the Outerimpact mount with the holes in the receiver of the Buckmark.


STEP 4: Place the shorter of the two 8-36 mounting screws in the front hole (barrel end)

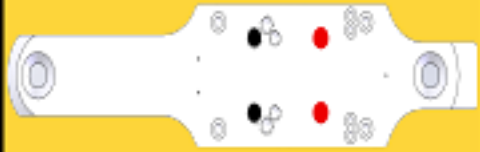

STEP 5: Place the longer of the two 8-36 mounting screws in the rear hole.

STEP 6: Torque screws to 25 in/lbs

MOUNTING PATTERNS:	SIGHT Manufacture	SIGHTS Model	SCREWS USED
The RED circles indicate locations for 2 included alignment pins  The BLACK circles indicate locations for mounting screws ---- <i>Torque Screws to 12 IN/LBS</i>			
	VORTEX BURRIS	VIPER FAST FIRE 3	M3 x 8mm 
	BURRIS DOCTOR INSIGHT EOTECH	FAST FIRE 2 MRDS MRDS	M3 x 6mm 
	VORTEX	VENOM	M3 X 6mm 

	TRIJICON	RMR	#6 SCREWS 
---	----------	-----	---

	LEUPOLD	Delta Point Delta Point Pro	SIGHT SUPPLIED SCREWS WORK
---	---------	--------------------------------	----------------------------

	VORTEX SIG SAUER CMORE	RAZOR ROMEO3 RTS & STS	M4 SCREWS 
---	------------------------------	------------------------------	---

UTILIZE LIQUID THREAD LOCKER UPON FINAL INSTALLATION OF ALL THREADED FASTENERS.