

# OUTERIMPACT

## MICRO RED DOT PATTERN INSTALLATION INSTRUCTIONS


### Sig P320-M17 M.R.D.A. (Micro Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

**WARNING:** Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

**Step 1:** Disassemble slide to remove rear sight plate per manufacturer's instructions taking care not to lose the Loaded Chamber Indicator or the Loaded Chamber Indicator spring.

**Step 2:** Place OuterImpact plate onto slide with notch for the Loaded Chamber Indicator to the front under the cut-out.

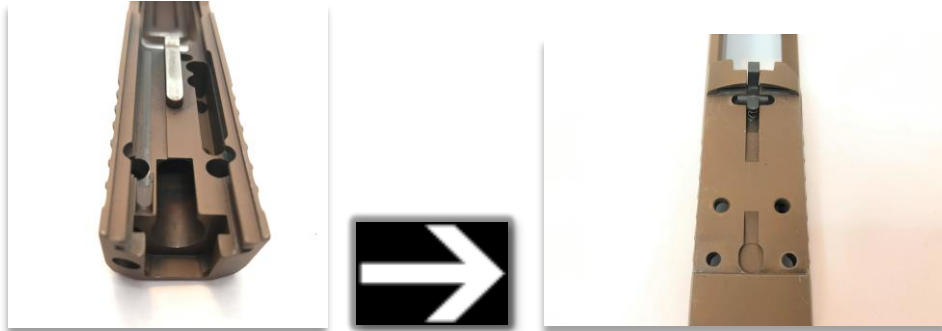

**Step 3:** Test fit the Red Dot sight to Outerimpact adapter, utilizing adjacent chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

**Step 4:** Secure adapter plate to slide using the 4-48 screws from the bag marked MNT HDWR and torque to **15 in/lb** with a torque wrench.



**WARNING:** Failure to follow all installation guidelines including recommended torque specifications can lead to property damage and/or bodily harm

Utilize liquid thread locker upon final installation of all threaded fasteners