


OUTERIMPACT

Ruger Mark Series M.R.A. (Modular Red Dot Adapter) Mounting Instructions


- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

Step 1: Locate bag marked "MNT HDWR" and remove the 2 Torx screws.

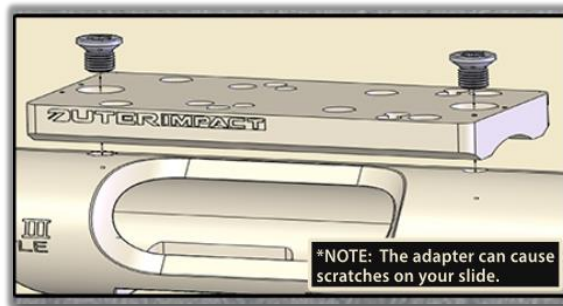

Step 2: Align M.R.A. as illustrated above. Fasten M.R.A. with Torx screws. Torque to **25 in/lbs.** Use **15 in/lbs** on **Lite models along with blue Loctite.**

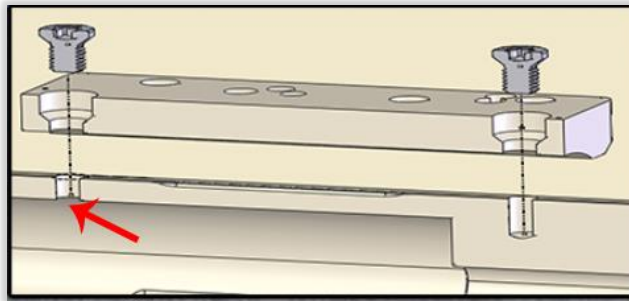

Step 3: Inspect the inside of the receiver to confirm the end of the torx screw does not interfere with the bolt.

Utilize liquid thread locker upon final installation of all threaded fasteners