

# OUTERIMPACT


## Canik TP9SF M.R.A. (Modular Red Dot Adapter) Mounting Instructions

- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

**WARNING:** Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.


**Step 1:** Remove existing rear sight from slide. **NOTE: Dovetail slot is directional and the rear sight should be removed from right to left.**

**Step 2:** Install OUTERIMPACT dovetail onto slide. **NOTE: New dovetail should be inserted from Left to right.** Dovetail and dovetail screws are located in bag marked "DVT."

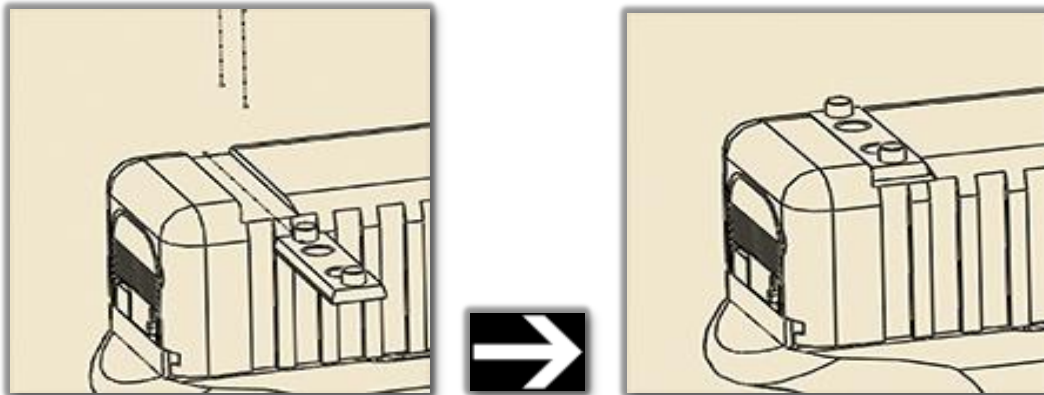

**Step 3:** Test fit the Red Dot sight to Outerimpact adapter, utilizing red dot pattern installation chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

**Step 4:** Secure sight adapter to dovetail with supplied weaver screws. Torque to **25 in/lb**. We recommend applying blue thread locker to all threads upon final installation.

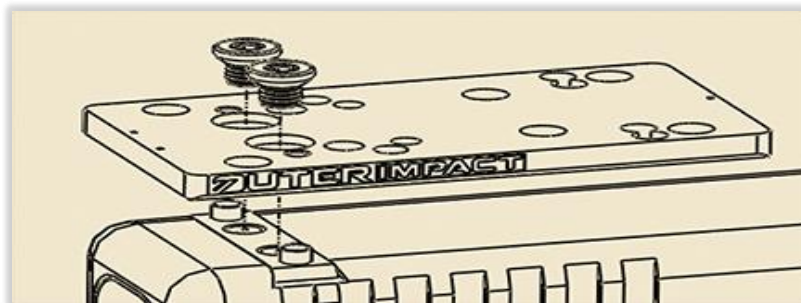

Note: The adapter has an intentional curve. This curve will flatten out when mounted. Utilize blue liquid thread locker upon final installation of all threaded fasteners.