


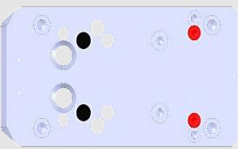

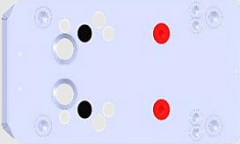


OUTER IMPACT

RED DOT PATTERN INSTALLATION INSTRUCTIONS

Using the screws/pins and the mounting pattern identified, mount the Red Dot sight adapter and torque to **12 in/lbs**

Mounting Patterns	Sight Manufacturer	Sight Models	Screws Used
<ul style="list-style-type: none"> The RED circles indicate locations for 2 included alignment pins The BLACK circles indicate locations for mounting screws -- Torque to 12 in/lb. 			
	Vortex	Viper	M3 x 8 
	Burris	Fast Fire 3&4	M3 x 8 Socket Flat Head
	UTG	Reflex Micro Dot	
	TruGlo	Tru-Tec	
	Crimson Trace	CTS-1250	
	Springfield	Dragonfly (must use OEM spacer plate)	M3 x 9 
	Vector Optics	Frenzy X	
	Sightmark	Mini Shot	M3 x 6 
Burris	Fast Fire 2		
Doctor	MRDS		
Insight	MRDS		
	Vortex	Venom	M3 x 6 
	Trijicon	RMR/SRO	#6 
	Holosun	407C/507C	#6 (use shorter set in the bag)
	Leupold	Delta Point Delta Point Pro	Sight Supplied Screws work
	Shield	RMS	Additional Screw Purchase Required
	Bushnell	RXS-100 and 250	Sight Supplied Screws Work
	Vortex	Razor	M4 x 10 
	Vortex	Defender CCW	Sight Supplied Screws
	Sig Sauer	Romeo 3, MAX, XL	Sight Supplied Screws

	<p>CMORE</p> <p>Crimson Trace</p> <p>Springfield</p> <p>SOUSA</p> <p>Athlon</p>	<p>RTS & STS</p> <p>1250 & 1550</p> <p>Wasp</p> <p>DARC Micro</p> <p>Midas EDC</p>	<p>Sight Supplied Screws</p> <p>M4 x 10</p> <p>M4 x 10</p> <p>M4 x 10</p> <p>Sight Supplied Screws</p>
---	---	--	--