

OUTERIMPACT

MICRO RED DOT PATTERN INSTALLATION INSTRUCTIONS

S&W M&P EZ M.R.D.A. (Micro Red Dot Adapter) Mounting Instructions


- While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for Installation

WARNING: Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

INSTALLATION VIDEO CAN BE FOUND HERE: <https://rumble.com/vnr66c-outerimpact-smith-and-wesson-380ez-adapter-installation.html>


Step 1: Remove existing rear sight from slide

Step 2: Install OUTERIMPACT dovetail onto slide.

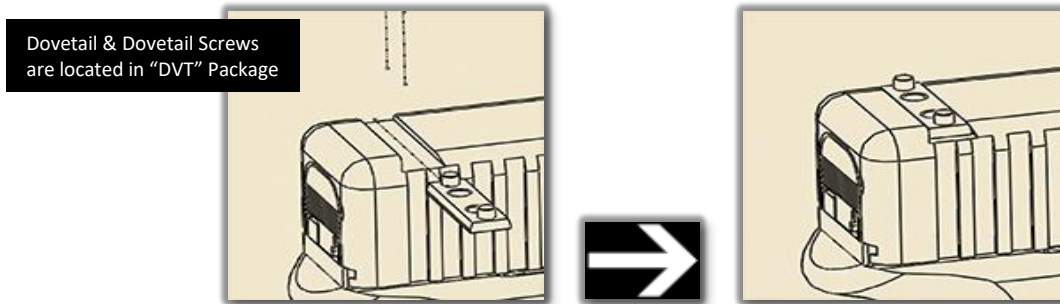

Step 3: Test fit the Red Dot sight to Outerimpact adapter. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

Step 4: Secure sight adapter to dovetail with supplied weaver screws. Torque to **25 in/lb.**

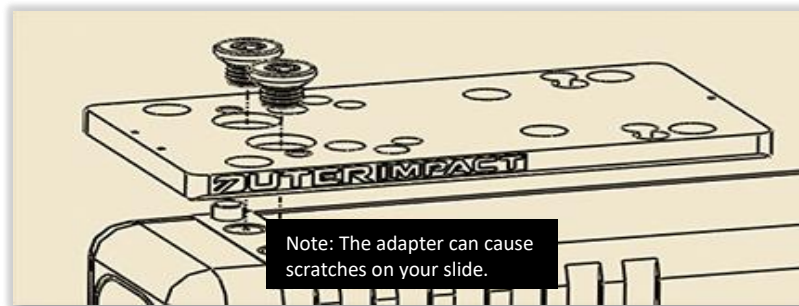

WARNING: Failure to follow all installation guidelines including recommended torque specifications can lead to property damage and/or bodily harm

Utilize liquid thread locker upon final installation of all threaded fasteners