



Installation Instructions for the OuterImpact Pull Start Handle


Required tools:

1 – T- 15 Torx Wrench / Torque Driver

- Disassemble the OEM handle and remove the knot.



- Disassemble the OuterImpact Handle, removing the screws and cap.

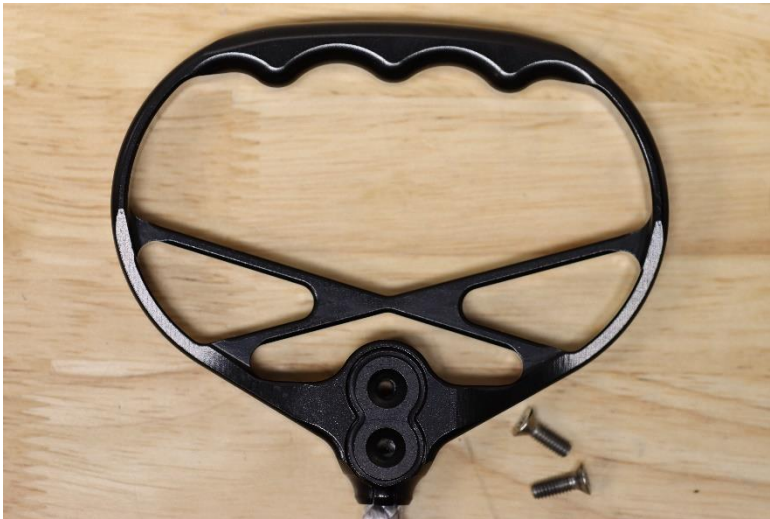


- We recommend laying the rope in the cavity starting with the end and pressing it in along the sides of the design. We prefer to not have the end of the rope extending

beyond the handle (just for looks) but doubling the rope is not an issue if it is small diameter.



- For rope below 5 mm you may want to figure eight the rope, dependent on diameter.

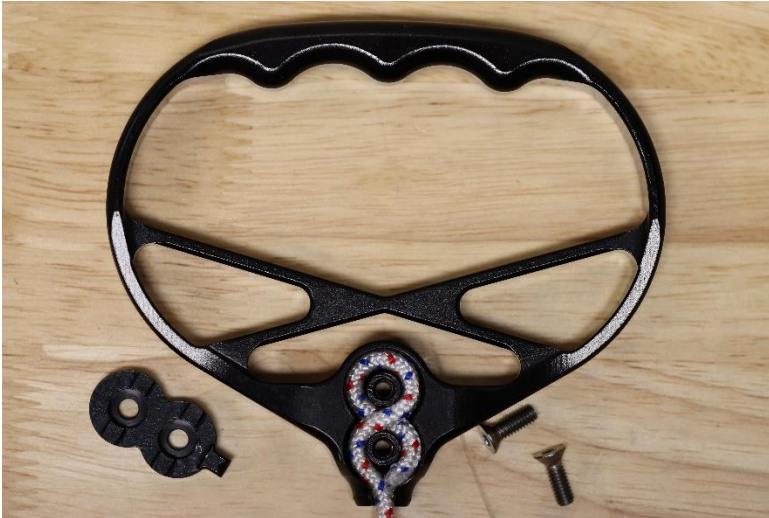

- For ropes above 5mm, just lay the rope along the entire cavity, the bosses on the cap will dig in and hold it tight.



- Torque screws to 15 in/lbs. and admire your fantastic new handle. Now, go show your friends.

