


OUTERIMPACT

MICRO RED DOT PATTERN INSTALLATION INSTRUCTIONS

WARNING: Failure to follow all installation guidelines including recommended torque specifications can lead to property damage and/or bodily harm

The RED circles indicate locations for 2 alignment pin posts

The BLACK circles indicate locations for mounting screws – Torque to 12in/lbs.

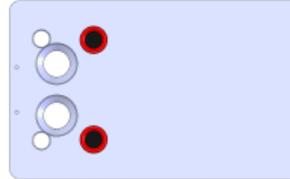

All screws are provided by OuterImpact unless otherwise noted.

| Sight Manufacturer | Sight Models | Screws Used |
|--------------------|-----------------------------------|--|
| Swampfox | Sentinel | M3x8  |
| Springfield | Wasp | |
| Holosun | EPS/EPS Carry | |
| Crimson Trace | CT RAD Micro | OEM Screws |
| J-Point | Micro | M3x6  |
| Crimson Trace | 1500/1550 | OEM Screws |
| Shield | RMSc/SMSc | M3x8  |
| Riton | 3 Tactix MPRD 2.0 X3 Tactix V2 | |
| SOUSA | DARC Micro | |
| Vector Optics | Frenzy S | M3x8 Socket Head Cap Screw |
| Holosun | 407/507K | M3x9  |
| Vortex | Defender CCW | |
| Athlon | Midas EDC | |
| OSight | S, SE, K | |
| Romeo | Zero | M3x10 |