

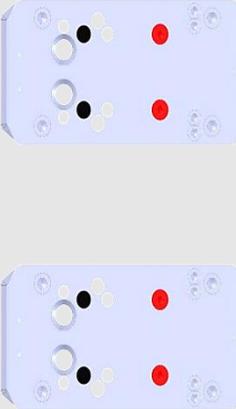
# OUTERIMPACT

## RED DOT PATTERN INSTALLATION INSTRUCTIONS

Using the screws/pins and the mounting pattern identified, mount the Red Dot sight adapter and torque to **12 in/lbs**

**All screws are provided by OuterImpact unless otherwise noted.**

Mounting Patterns	Sight Manufacturer	Sight Models	Screws Used
	Vortex	Viper	M3 x 8
	Burris	Fast Fire 3&4	M3 x 8
	UTG	Reflex Micro Dot	
	TruGlo	Tru-Tec	
	Holosun	EPS/EPS Carry	OEM Screws
	Crimson Trace	CTS-1250 CT RAD	
	Springfield	Dragonfly (must use OEM spacer plate)	M3 x 8 Socket Flat Head
	Vector Optics	Frenzy X	M3 x 9
	Sightmark	Mini Shot	
		Burris	Fast Fire 2
Doctor		MRDS	M3 x 6
Insight		MRDS	
Eotech			
	Vortex	Venom	M3 x 6
	Trijicon	RMR/SRO	#6
	Holosun	407C/507C/507Comp	#6 (use shorter set in the bag)
	Osight	C	Sight Supplied 6-40 Screws
	Leupold	Delta Point Delta Point Pro	Sight Supplied Screws work
	Shield	RMS	Additional Screw Purchase Required
	Bushnell	RXS-100 and 250	Sight Supplied Screws Work

	<p>Vortex</p> <p>Vortex</p> <p>Sig Sauer</p> <p>OSight</p> <p>CMORE</p> <p>Crimson Trace</p> <p>Springfield</p> <p>SOUSA</p> <p>Athlon</p>	<p>Razor</p> <p>Defender CCW</p> <p>Romeo 3, MAX, XL</p> <p>OSight S</p> <p>RTS &amp; STS</p> <p>1550 / CT RAD Micro</p> <p>Wasp</p> <p>DARC Micro</p> <p>Midas EDC</p>	<p>M4 x 10 </p> <p>Sight Supplied Screws</p> <p>Sight Supplied Screws</p> <p>Sight Supplied Screws</p> <p>Sight Supplied Screws</p> <p>M4 x 10</p> <p>M4 x 10</p> <p>M4 x 10</p> <p>Sight Supplied Screws</p>
---	--	---	--