OUTERIMPACT

RUGER 10/22 - M.R.A (Modular RedDot Adapter)
Mounting Instructions

Utilize a certified Gun Smith to install adapter. It is possible to install adapter if a Gun Smith is not accessible, but it is reccomended that adapter be installed by a Gun Smith.

WARNING: *Never remove or install components on a gun before ensuring the gun is not loaded and the chamber is clear.*

Step 1: Locate bag marked "MNT HDWR" and remove the (2) 6-48 Torx headed screws.

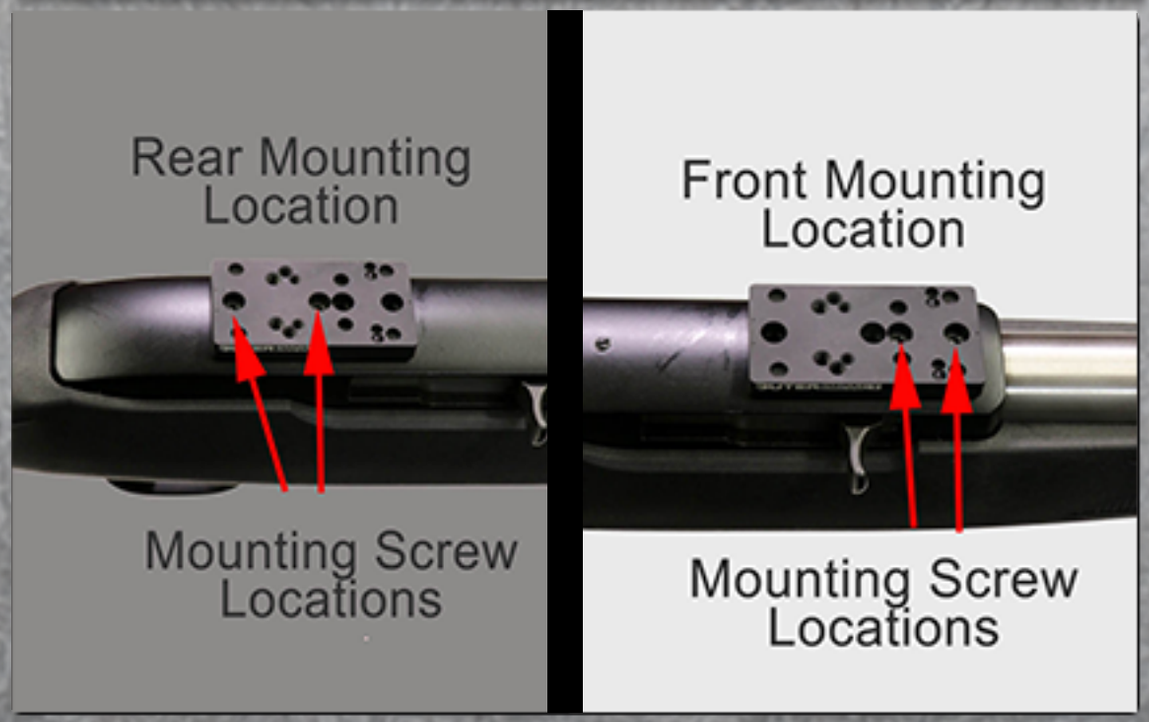

Step 2: Choose one of the 2 mounting locations. Either forward or reward mounting holes.

STEP 3: Remove the factory screws from receiver in the desired mounting location.

STEP 4: Align MRA plate over the chosen mounting holes.

STEP 5: Fasten MRA plate to receiver utilizing the (2) 6-48 Torx headed screws (provided).

STEP 6: Torque screws to 25 in/lbs

MOUNTING PATTERNS:	SIGHT Manufacture	SIGHTS Model	SCREWS USED
The RED circles indicate locations for 2 included alignment pins The *BLACK* circles indicate locations for mounting screws ---- *Torque Screws to 12 IN/LBS*			
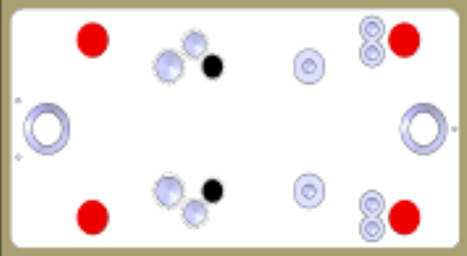	VORTEX BURRIS	VIPER FAST FIRE II/III	M3 x 8mm
	DOCTOR INSIGHT EOTECH	 MRDS MRDS	SIGHT SUPPLIED SCREWS WORK OR UTILIZE PROVIDED M3 x 6mm
	VORTEX	VENOM	M3 X 6mm
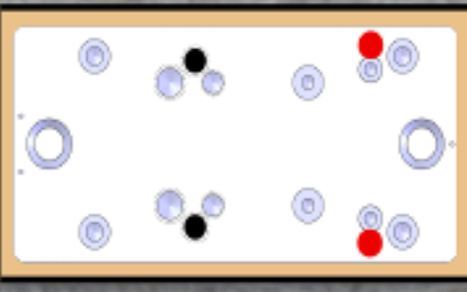	TRIJICON	RMR	SIGHT SUPPLIED SCREWS WORK
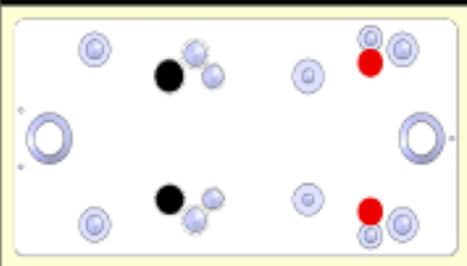	LEUPOLD	Delta Point Delta Point Pro	SIGHT SUPPLIED SCREWS WORK
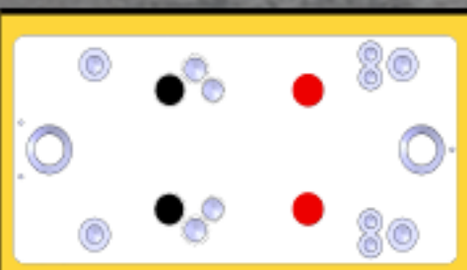	VORTEX SIG SAUER CMORE	RAZOR ROMEO3 RTS & STS	M4 SCREWS

UTILIZE LIQUID THREAD LOCKER UPON FINAL INSTALLATION OF ALL THREADED FASTENERS.